

# Side step / Mercedes Sprinter 18-

Item no: AT237XXX-S

## Contents - QMK0018

#	No	Item no	Description
A	2x	23032003	Mounting bracket
B	1x	23032004	Mounting bracket
C	3x	23020004	L Bolt M8x30
D	3	985V084	Nut M8
E	3	125A084	Washer M8
F	2x	7985T0600304	Nut Torx A2 M6x30
G	2x	7570600000	Bolt M6x18,5
H	2x	125A064	Washer M6
I	2x	985V104	Nut M10
J	2x	933100304	Bolt M10x30
K	2x	125A104	Washer A2 M10



## Contents - QAT1200

#	No	Item no	Description
1	1x	SMV3109	Step
2	1x	23012001	Plastic cap right side
3	1x	23012002	Plastic cap left side
4	4x	933080204	Bolt M8x20
5	4x	985V084	Nut M8
6	4x	125A084	Washer M8
7	2x	7504NT0350092	Self-tapping screw
8	1x	ULS812	Reflex, white (forward pointing)
9	2x	ULS804	Reflex, yellow (sideways pointing)
10	2x	ULS805	Reflex, red (rear pointing)




# Side step / Mercedes Sprinter 18-

Item no: AT237XXX-S

Front ← → Rear



1

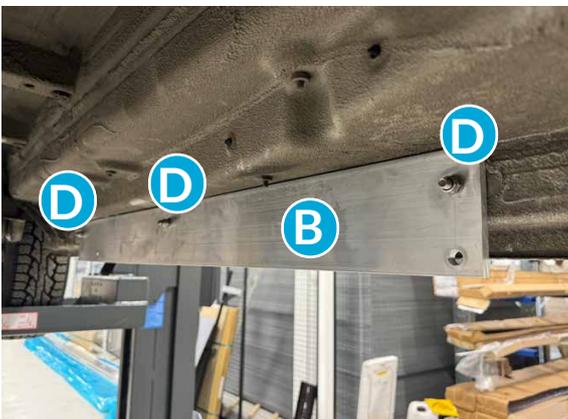

2



3

# Side step / Mercedes Sprinter 18-

Item no: AT237XXX-S

